USER'S GUIDE

V:1720-0126-10

IHP310B

Home Music System for iPhone/iPod

For the most up-to-date version of this User's Guide, go to ***www.ilive.net***

WARNINGS AND PRECAUTIONS

- CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- ***PRÉCAUTION:*** *Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.*
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.

Main plug is used as disconnect device and it should remain readily operable during intended use.

Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
No mezcle baterías viejas y nuevas.
No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player's lid is open and the system's interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC Warnings

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
  L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.

- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected form the mains socket outlet completely.
  La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
  Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.

- Caution marking is located at the rear of the apparatus.
  Les marquages sont inscrits de derrière de l'appareil.

- The marking information is located at the rear of apparatus.
  Les précautions d'emploi sont inscrites de derrière de l'appareil.

HOME MUSIC SYSTEM FOR IPHONE/IPOD

Features

- Works with iPhone
- Made for iPod
- CD player: CD, CD-R/RW
- FM radio
- Station memory presets (10 FM)
- Line input (3.5mm)
- Digital clock
- Sleep timer
- On/Off timer
- White LCD display
- Supports Universal docking brackets
- Basic iPhone/iPod controls from remote
- Wall-mountable
- Composite video output
- Remote control
- Motorized CD door
- Cloth net speaker grills
- Last user setting memory
- DC power input: requires an AC/DC power adapter (included)

Included

- AC/DC power adapter
- Remote control: requires 1 CR2025 battery (pre-installed)
- Docking brackets for iPhone/iPod (5)

TABLE OF CONTENTS

INTRODUCTION 6

SETUP 8

CLOCK 9

IPHONE/IPOD, VIDEO OUTPUT, & LINE INPUT 10

CD & RADIO 11

COMPANY INFORMATION 12

INTRODUCTION

POWER
Press to turn the music system off or on.

SOURCE
Press to switch between Radio, CD, iPod, and AUX modes.

MEM-/REPEAT
In radio mode, press to cycle through saved radio stations. In CD or iPod mode, press to repeat the current track or current album.

MEM/CLK SET
With the power off, press to set the clock. In radio mode, press to save the current station as a preset.

EQ
Press to switch between Rock, Classic, Jazz, and Pop EQ modes, and Off mode.

VOLUME
Press to adjust the volume.

iPod
Press to switch to iPod mode.

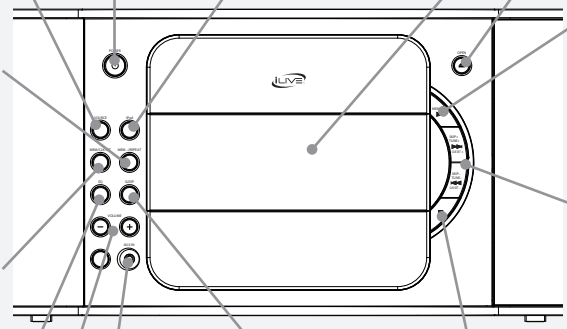

AUX IN

SLEEP
Press repeatedly to set a sleep timer.

STOP
Press to stop a CD during play.

CD DOOR

OPEN
Press to open the CD door.

PLAY/PAUSE/MEM+
Press to play or pause a loaded CD or docked iPhone/iPod. In Radio mode, press to cycle through preset radio stations.

SKIP/SEARCH/TUNE
Press to skip through tracks on a CD or iPod. Press and hold to search through individual tracks. In radio mode, press to tune the FM radio. Press to adjust the time when setting the clock.

DC POWER INPUT

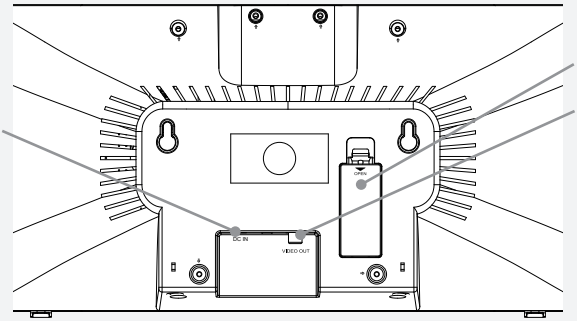

BACKUP BATTERY

VIDEO OUTPUT

MUTE
Press to mute the volume.

POWER
Press to turn the music system off or on.

MEM/MENU/ PROGRAM
In radio mode, press to save the current station as a preset. In iPod mode, press to go to the previous menu on a docked iPhone/iPod. In CD mode, press to program a CD to play tracks in a specified order.

DISPLAY
Press to view the time when in Radio mode.

SHUFFLE
Press to play tracks from a loaded CD or docked iPhone/iPod in random order.

SLEEP
Press repeatedly to set the sleep timer.

TIMER
Press to set the timer. In off mode, press to set the Timer ON or Timer OFF.

CHAPTER/ALBUM/ PLAYLIST
Press to switch between chapters, albums, and playlists on a docked iPhone/ iPod.

REPEAT/M-
Press to repeat a track or entire album on a loaded CD or docked iPhone/iPod. In radio mode, press to cycle through preset radio stations.

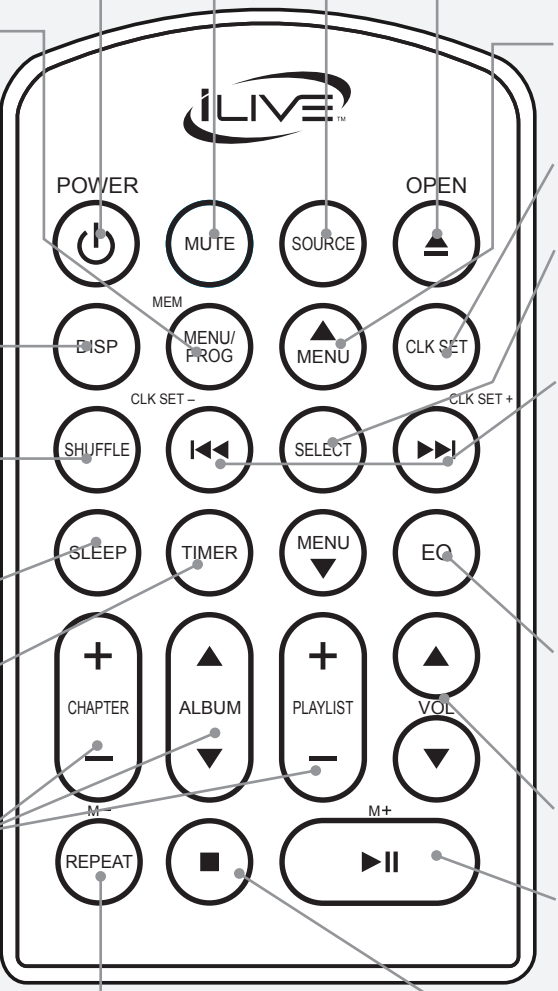

SOURCE
Press to switch between Radio, CD, AUX, and iPod modes.

OPEN
Press to open the CD door.

MENU (▲ ▼)
Press to navigate the menu on a docked iPhone or iPod.

CLK SET
With the power off, press to set the clock.

SELECT
Press to make selections on a docked iPhone or iPod.

SKIP/SEARCH/TUNE
Press to skip through tracks on a CD or iPod. Press and hold to search through individual tracks. In radio mode, press to tune the FM radio. Press to adjust the time when setting the clock.

EQ
Press to switch between Rock, Classic, Jazz, and Pop EQ modes, and Off mode.

VOLUME
Press to adjust the volume.

PLAY/PAUSE/M+
Press to play or pause a loaded CD or docked iPhone/iPod. In radio mode, press to cycle through preset radio stations.

STOP
Press to stop a CD during play.

SETUP

Power

Plug the included AC/DC power adapter into the **DC POWER INPUT** and a standard AC power outlet.

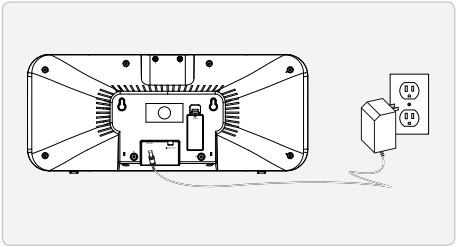

Backup Battery

Requires 2 AAA batteries (not included)

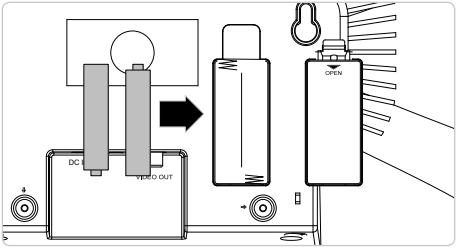

Remote Power

Requires 1 CR2025 battery (pre-installed)

Setting the Timer

1 With the power off, press the **TIMER** button.

TIMER ON will appear on the display.

2 Press and hold the **TIMER** button.

The display will begin blinking.

3 Press the **SKIP/SEARCH/TUNE** buttons to adjust the hour.

4 Press the **TIMER** button.

5 Press the **SKIP/SEARCH/TUNE** buttons to adjust the minute.

6 Press the **TIMER** button.

TIMER OFF will appear on the display.

7 Press the **SKIP/SEARCH/TUNE** buttons to adjust the hour

8 Press the **TIMER** button.

9 Press the **SKIP/SEARCH/TUNE** buttons to adjust the minute.

10 Press the **TIMER** button to finish setting the timer.

11 Press and hold the **TIMER** button to cancel the timer.

Setting the Clock

1 Press the **POWER** button to turn the music system on.

2 Press and hold the **CLK SET** button.

The display will begin blinking.

3 Press the **SKIP/SEARCH/TUNE** buttons to select 12 hour or 24 hour time.

4 Press the **CLK SET** button.

5 Press the **SKIP/SEARCH/TUNE** buttons to adjust the hour.

6 Press the **CLK SET** button.

7 Press the **SKIP/SEARCH/TUNE** buttons to adjust the minute.

8 Press the **CLK SET** button to finish setting the time.

Setting the Sleep Timer

1 While playing the Radio, CD, AUX, or iPod press the **SLEEP** button repeatedly to set the sleep timer.

2 After the set sleep time has expired the music system will power off.

IPHONE/IPOD, VIDEO OUTPUT, & AUX INPUT

Docking an iPhone/iPod

1 Locate the numbered bracket that fits the iPhone/iPod model that will be docked.

Each included bracket has a number on it, indicating which iPhone/iPod model that bracket is compatible with. See the separate bracket chart page to identify which bracket is needed.

2 Snap the bracket into place over the iPhone/iPod connector in the dock for iPhone/iPod.

3 Connect the iPhone or iPod to the connector inside the Dock for iPhone/iPod.

When the speaker is plugged in, using AC power, the docked iPhone or iPod will charge.

Playing an iPhone/iPod

1 Follow the instructions for docking an iPhone/iPod.

2 Press the **POWER** button to turn the music system on.

3 Press the **iPod** button to switch to iPod mode.

4 Press the **PLAY/PAUSE** button to begin playing music from the docked iPhone or iPod.

Video Output

Requires a RCA video cable (not included).

1 Follow the instructions for docking an iPhone/iPod and Playing an iPhone/iPod.

2 Make sure "TV Out" is set to "On" in the video settings of the docked iPhone or iPod.

3 Connect a RCA video cable to the **VIDEO OUTPUT** on the music system and a video input on a television.

4 Adjust the television to the correct input setting.

5 Videos played through the docked iPhone or iPod will now play on the connected television.

Using the AUX Input

1 Connect an MP3 player or other audio device to the **AUX INPUT** using a 3.5mm cable (not included).

2 Press the **POWER** button to turn the music system on.

3 Press the **SOURCE** button to switch to AUX mode.

4 Use the native controls on the connected MP3 player to play audio through the music system.

Tuning the FM Radio

1 Press the **POWER** button to turn the music system on.

2 Press the **SOURCE** button to switch to FM radio mode.

3 Press the **SKIP/SEARCH/TUNE** buttons to tune the FM radio.

Saving a Radio Station as a Preset

1 Follow the instructions for Tuning the FM Radio.

2 Once the desired station is reached, press and hold the **MEM/CLK SET** button for 3 seconds.

3 Press the **SKIP/SEARCH/TUNE** buttons to select a preset.

4 Press the **MEM/CLK SET** button to save the current radio station to the selected preset.

Selecting a Preset Station

1 Follow the instructions for Tuning the FM Radio.

2 Follow the instructions for Saving a Radio Station as a Preset.

3 Press the **MEM-/REPEAT** and **PLAY/PAUSE/MEM+** buttons to cycle through preset radio stations.

Loading and Playing a CD

1 Press the **POWER** button to turn the music system on.

2 Press the **SOURCE** button to switch to CD mode.

3 Press the **OPEN** button to open the CD door.

4 Load a CD into the music system, label side facing out.

5 Press the **OPEN** button to close the CD door.

6 Press the **PLAY/PAUSE** button to begin playing music from the loaded CD.

Programming a CD

1 Follow the steps for Playing a CD.

2 Press the **STOP** button to stop the CD.

3 Press the **MENU/PROG** button on the remote.

4 Press the **SKIP/SEARCH/TUNE** buttons to select the track you want to play first.

5 Press the **MENU/PROG** button to save the selected track as the first programmed track.

6 Repeat steps 3 , 4, and 5 until the desired tracks have been programmed.

Up to 20 tracks can be programmed at one time.

COMPANY INFORMATION

Green Initiative

Environmental Commitment to 'Protect for Today and Sustain for Tomorrow'

2009 marks the official launch of DPI, Inc.'s corporate campaign for a greener and cleaner world. DPI and its four brands, iLive, WeatherX, Capri, and GPX, are building upon environmental initiatives introduced at all of their facilities to help formulate and sustain significant and important conservation efforts within its manufacturing and marketing communities. In addition to targeting and selecting energy efficient product features, and structuring 'green office' procedures, other initial program efforts include:

- Reduction of all packaging sizes
- Recyclable plastics for clamshell packages, with a plan to eventually replace plastic with recyclable paper
- Recycled fiber board in place of the polyfoam in packing boxes
- Recycled plastics in place of the virgin material in product construction

International Support

To download this User's Guide in English, Spanish, or French, visit the support section at www.ilive.net.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.ilive.net.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.ilive.net.

Contact Information

Address: 2116 Carr Street, St. Louis MO, 63106

Phone: 1-314-621-2881

Fax: 1-314-588-1805

Email: customerservice@ilive.net

Parts Email: partsinfo@dpi-global.com

Website: www.ilive.net

© 2009 Digital Products International (DPI, Inc.) | All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice